



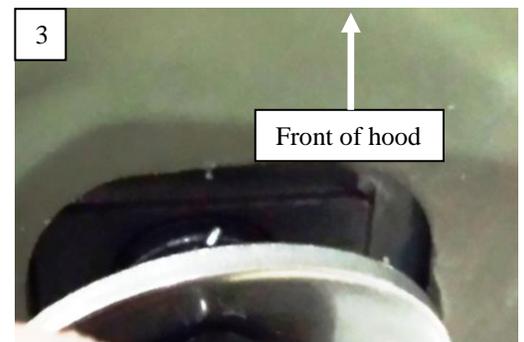


## Steeda Hood Strut Kit '05+ Ford Mustang Instructions for Part # 555-0684

Raise the hood and secure with factory prop rod. Locate the hole in the factory hood about half way up on the outer edge (pic 1). Using the supplied threaded ball studs, install the washer and screw it into the hood support piece (pic 2). Screw it just a couple threads and then install it into the hole in the hood and tighten it down. Note: Make sure the hood support piece is turned to where the long end of it is going left to right on the car (pic 3). The piece in the hood will lock into place to allow you to tighten it with ease. Repeat for the other side.

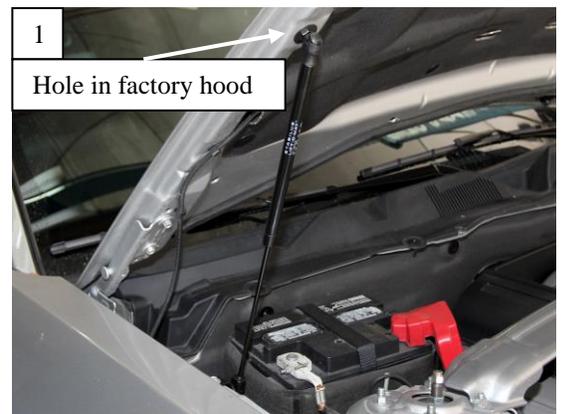

1. Install the fender brackets. Locate the second fender bolt from the hood hinge and remove. Install the Steeda hood strut fender bracket as shown below (pic 4). Repeat this for the other side.
2. With the gas portion (thicker end) of the strut towards the hood, install the hood struts (pic 1). Repeat this for the other side. Remove factory hood prop if desired.

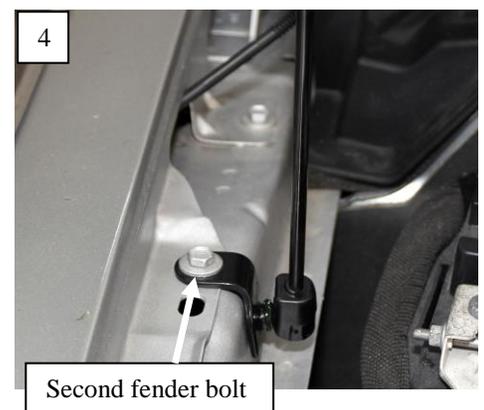


Steeda Autosports Inc. All Rights Reserved.

**\*\*Note\*\***

2010+ models will need to use the Noise Tube Relocation Bracket and hardware provided with the kit. The bracket is used to relocate the noise tube assembly away from the fender so that the hood can be closed with the kit installed. To install the bracket: Unbolt the Noise Tube assembly from the fender and bolt the bracket to the existing holes with the 8mm x 25mm bolts as shown in figure 10. Then bolt the noise tube assembly to the other holes in the bracket as shown in figure 11 with the provided 8mm x 45mm bolt.



**Fig 10**

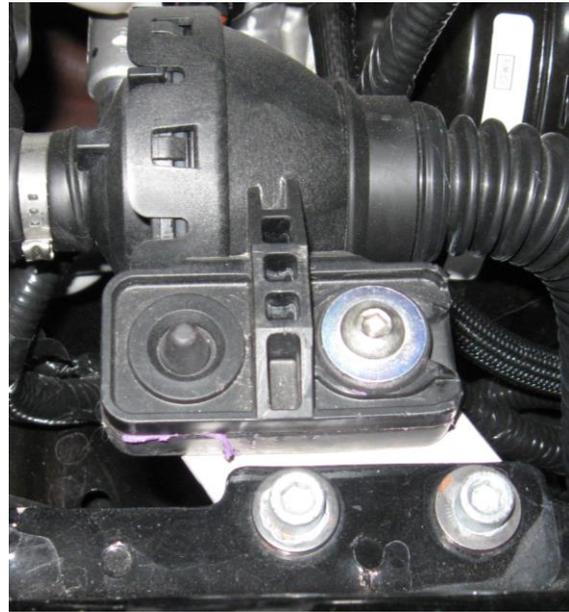

**Fig 11**