



Billet Lower Engine Mount

For: 2011+ Ford Fiesta

Installation Instructions for part: 555-4029




Refer to a shop manual for torque specifications.

Removal of the factory engine mount

1. Lift the front of the car so that the front wheels are off the ground. Use caution operating a lift, or jack stands, to ensure the car is stable, and safe, to work around, and underneath.
2. Remove the engine mount bracket bolts at the trans. See figure 1.
3. Gently pry the bracket off of the engine mount. See figure 2.
4. Remove the rear engine mount bolt at the subframe. Remove the mount.

Installation of the Steeda Billet Lower Engine Mount

5. Generously grease the faces of all the bushings in the billet engine mount.
6. Place the Steeda mount in the same location and orientation of the factory mount. The end with the larger bushings mount to the subframe.
7. The hardware and spacers are to be installed with the mount as indicated in figure 3, and figure 4.
8. Re-install the front bracket and finish installation in reverse of removal. Torque all bolts to specification.
9. The completed assembly should look similar to figure 4.
10. Road test the vehicle. Any clunking or unusual noises should not be present. If so, re-check installation and torque on all fasteners.

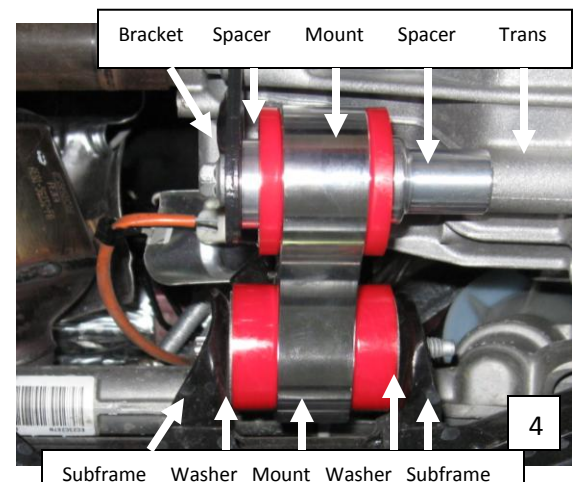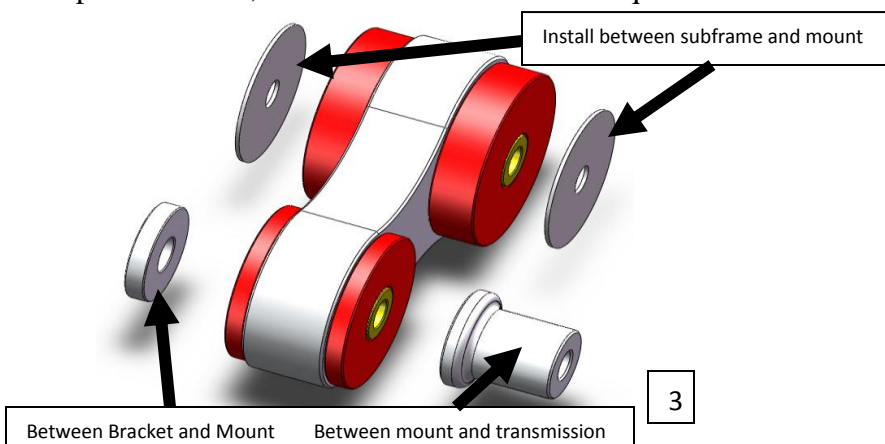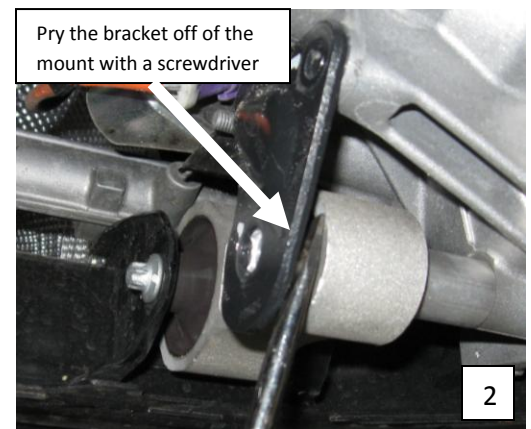

Thank you for choosing Steeda Autosports, if you have any questions feel free to call us at 954-960-0074, or email us at GoFast@Steeda.com