

STEEDA SHIFTER ISOLATOR KIT


Fits all aftermarket shifters

INSTRUCTIONS FOR PART # 555-7096

1. The rubber isolator is designed to go between the shift lever and the shift handle.
2. Insert the supplied bolts through the handle, through the isolator and then screw them into the shift lever. Tighten to desired firmness and lock the assembly together using the two supplied jam nuts. See Pic #2.



© Steeda Autosports Inc. All Rights Reserved 2005
05/31/05 555-7096.doc

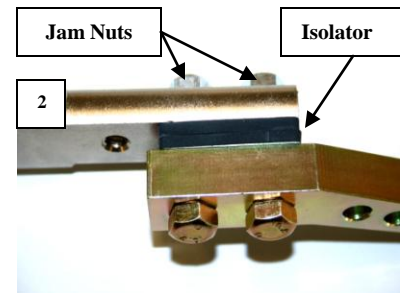

STEEDA SHIFTER ISOLATOR KIT

Fits all aftermarket shifters

INSTRUCTIONS FOR PART # 555-7096

3. The rubber isolator is designed to go between the shift lever and the shift handle.
4. Insert the supplied bolts through the handle, through the isolator and then screw them into the shift lever. Tighten to desired firmness and lock the assembly together using the two supplied jam nuts. **Pic 2**



© Steeda Autosports Inc. All Rights Reserved 2005
05/31/05 555-7096.doc

