




Steeda S550 Mustang Carbon Fiber Rear Spoiler

Installation Instructions for
Part #: 555-0510

Factory Rear Spoiler Removal

1. Open trunk and unscrew rubber bumpers on each side of latching mechanism.
2. Remove and plastic push pins with panel tool.
3. Remove rubber plugs at each corner of trunk lid.
4. Carefully remove felt liner being careful not to tear area around latch and feed emergency release mechanism through liner.
5. Remove OE spoiler retaining nuts with 10mm socket.
6. With all nuts removed, carefully pry off factory spoiler with plastic tool or by hand.
7. Remove all adhesive residue from trunk lid with non-residual cleaning solvent.

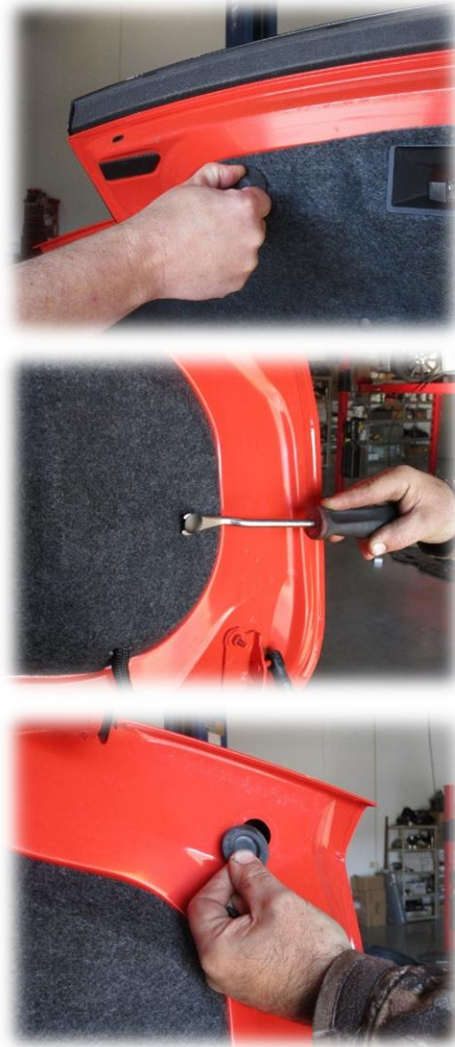

Steeda Rear Spoiler Installation

8. Remove plastic backing from double sided tape and place lightly on trunk ensuring spoiler is centered on trunk lid.
9. After confirming fitment press firmly along entire length of spoiler to seat adhesive.
10. Install removed factory components in opposite order of removed.

