




**MADE IN AMERICA**



**STEEDA**

## Explorer SPORT Throttle Body Spacer

Instructions for 555-3226

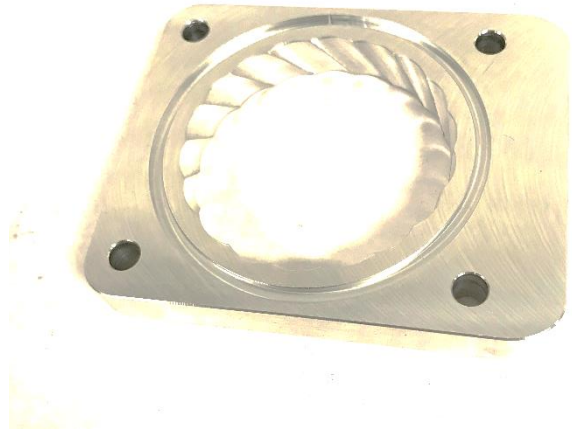

### Installation

1. Unbolt the engine cover and remove it for access to the throttle body.
2. Disconnect the two connectors on the throttle body and the one on the plastic tube connected to the throttle body.
3. Loosen the hose clamps on the plastic tube connected to the throttle body, and remove it.
4. Remove the 4 bolts securing the throttle body to the intake manifold.
5. Insert the Steeda throttle body spacer between the throttle body and the intake manifold, with the o-ring facing the throttle body.
6. Reinstall the throttle body using the factory bolts.
7. Reinstall all parts and hardware that were disconnected or removed in the reverse order.

