STEEDA Front Swaybar Brace

2005 Mustang
Installation Instructions for 555-5553

Caution! Installing this product requires disassembly of some components of the suspension. If you are not confident you can complete the job safely, have the work performed by a certified technician who is familiar with the front suspension of a Mustang. Failure to reassemble the suspension properly can lead to serious injury.

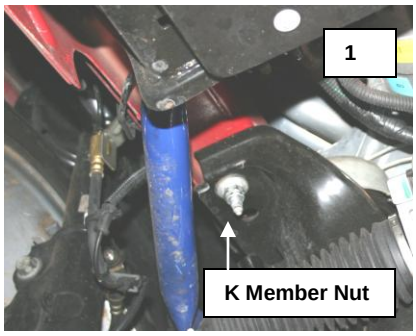

INSTALLATION INSTRUCTIONS:

1. Carefully raise the vehicle to access the front suspension. If working from the floor, be sure to secure the vehicle on jack stands.

2. **(Pic 1)** Locate the nuts that attach the K-member (or number 2 cross member) to the vehicle. Be sure to properly support the weight of the K-member prior to removing the nuts.

3. **(Pic 2)** Remove the front two K-member nuts

4. **(Pic 3)** Remove the top left and top right nuts connecting the sway bar mounts to the number 1 cross member.

5. **(Pic 4)** Be sure to use the provided spacer on the sway bar side as shown

6. **(Pic 5)** Note that the braces are specific to each side of the vehicle. Install both the left and right braces by sliding the hole in the straight tab onto the K-member bolt after positioning the hole in the angled tab over the top swaybar bracket bolt on the number one cross member. Replace both the K-member nuts and the sway bar nuts. Tighten to factory specifications.

7. Double-check all connections. Then, carefully remove the support from the K-member and lower the vehicle.

8. Test drive and enjoy!

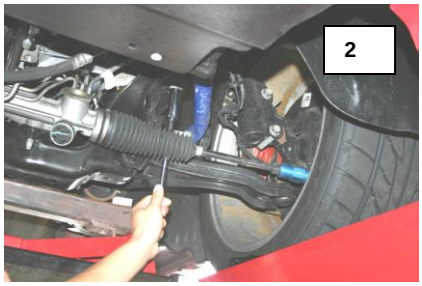

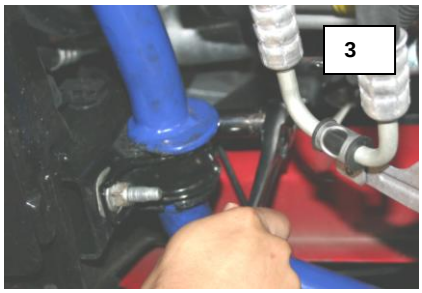

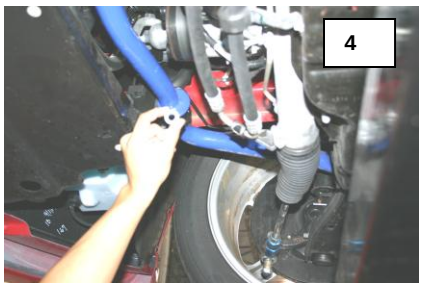

© Steeda Autosports Inc. All Rights Reserved 2005

Thank You for Choosing STEEDA! Questions / Comments / Suggestions: (954) 960-0774 / gofast@steeda.com